


# THROTTLE CALIBRATION


\*Please calibrate the throttle range when you use a new FLAME ESC or RC.

## Step 1: Wiring Diagram

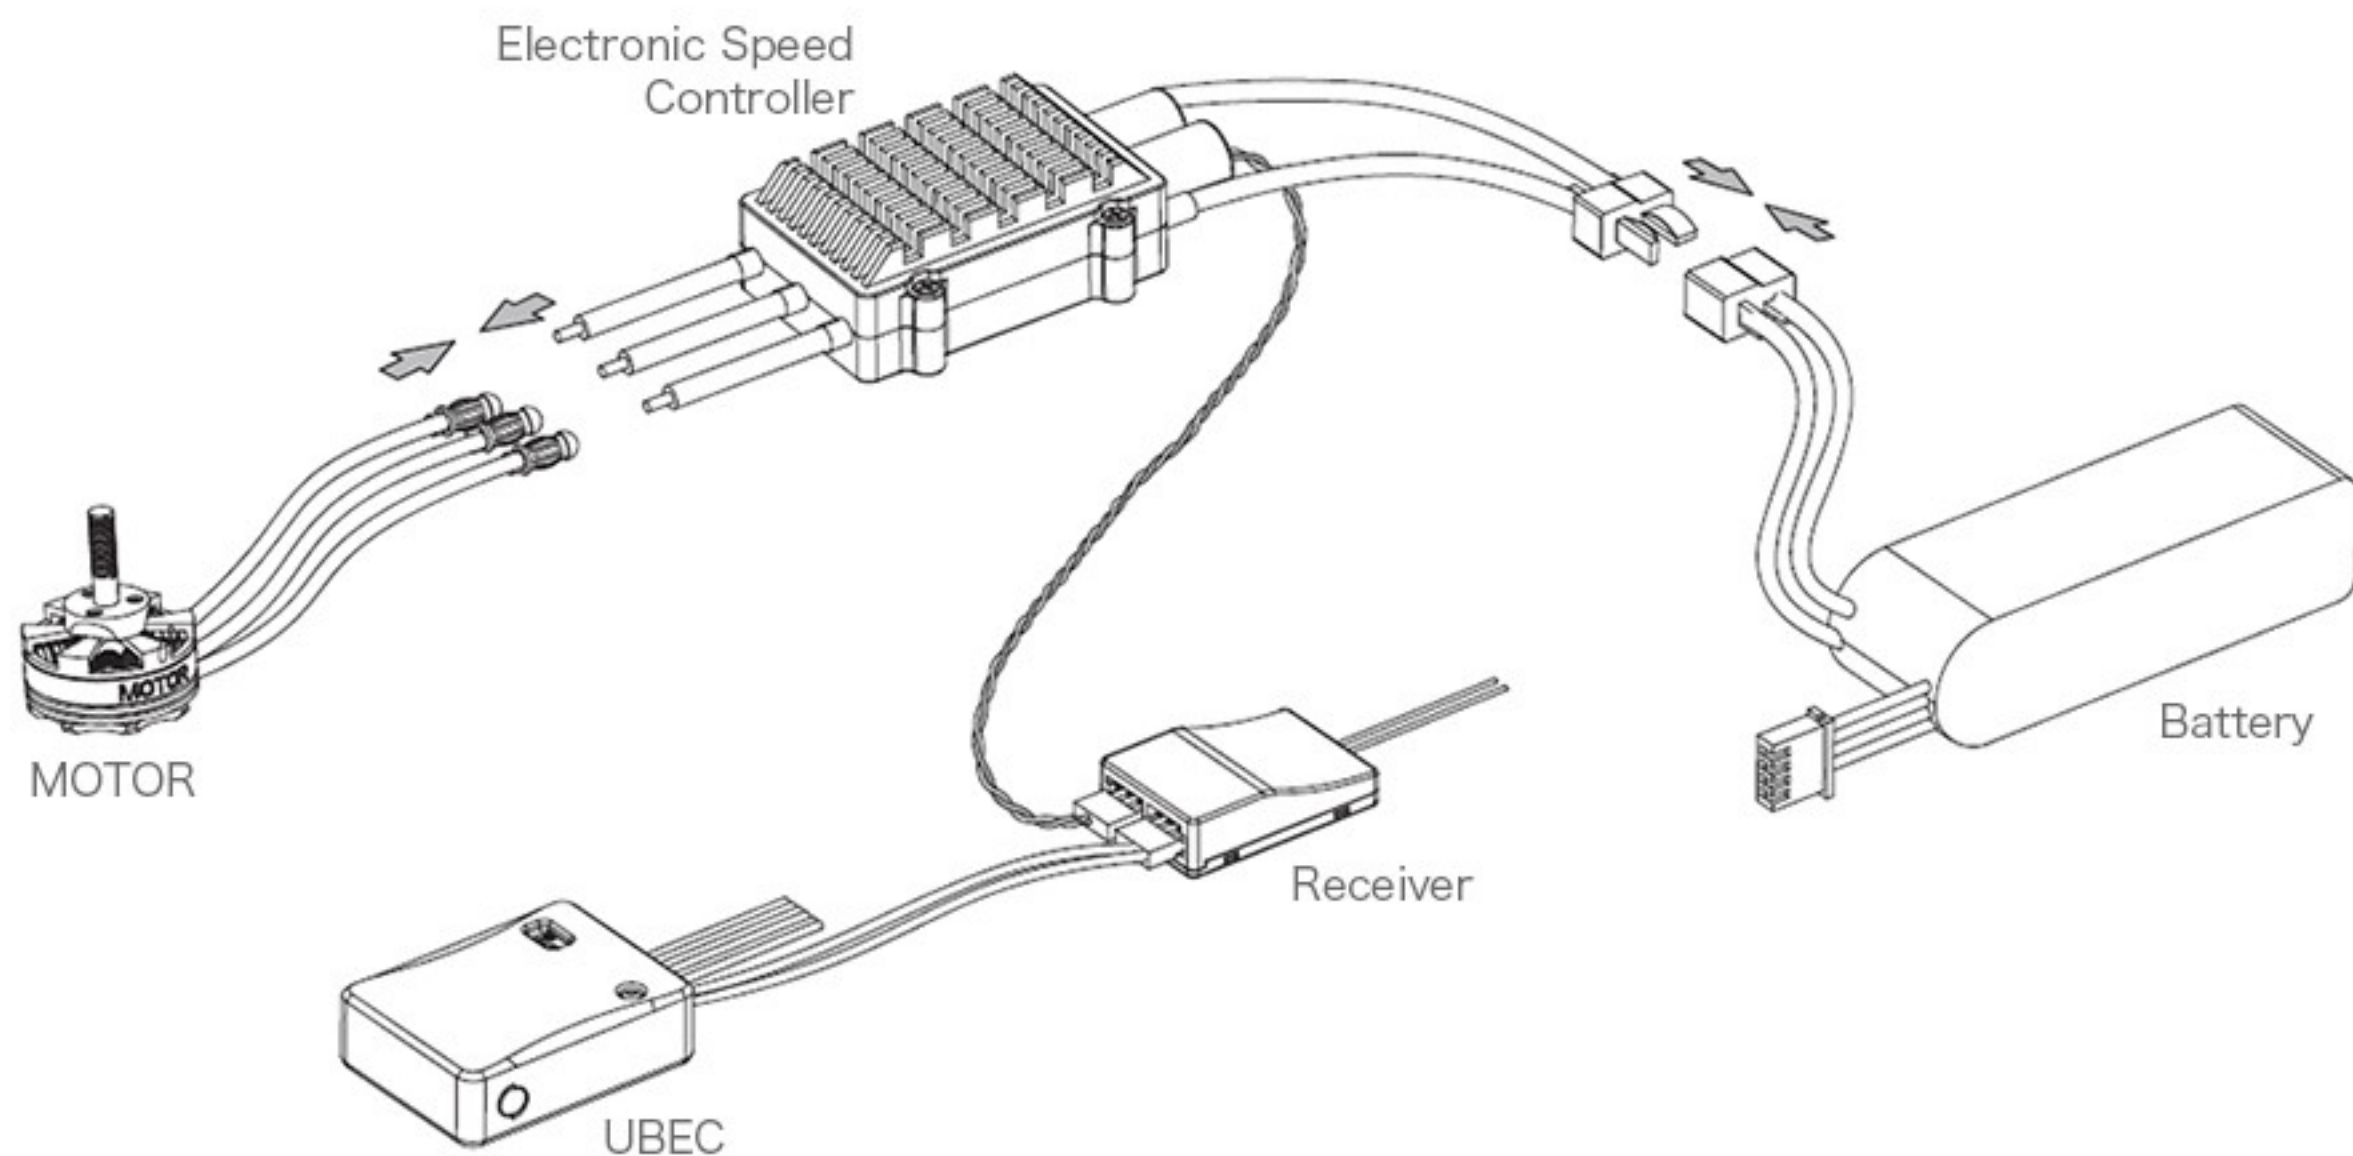


⚠ For safety sake, please remove the propellers during throttle calibration !

## Step 2: Throttle Range Calibration

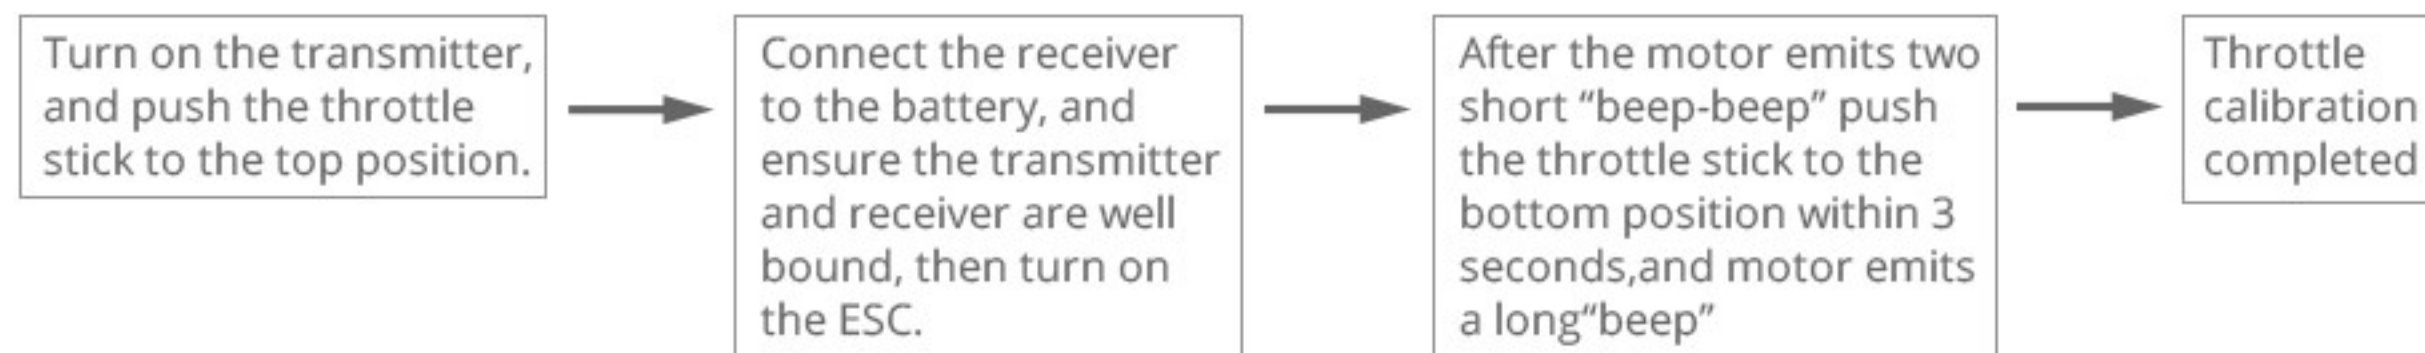

\*If the throttle stick is not pushed to the bottom position, motor will emit short beeps. In that case, you need to recalibrate!

## Step 3: ESC Programming (For FLAME 80A 12S V2.0 only)

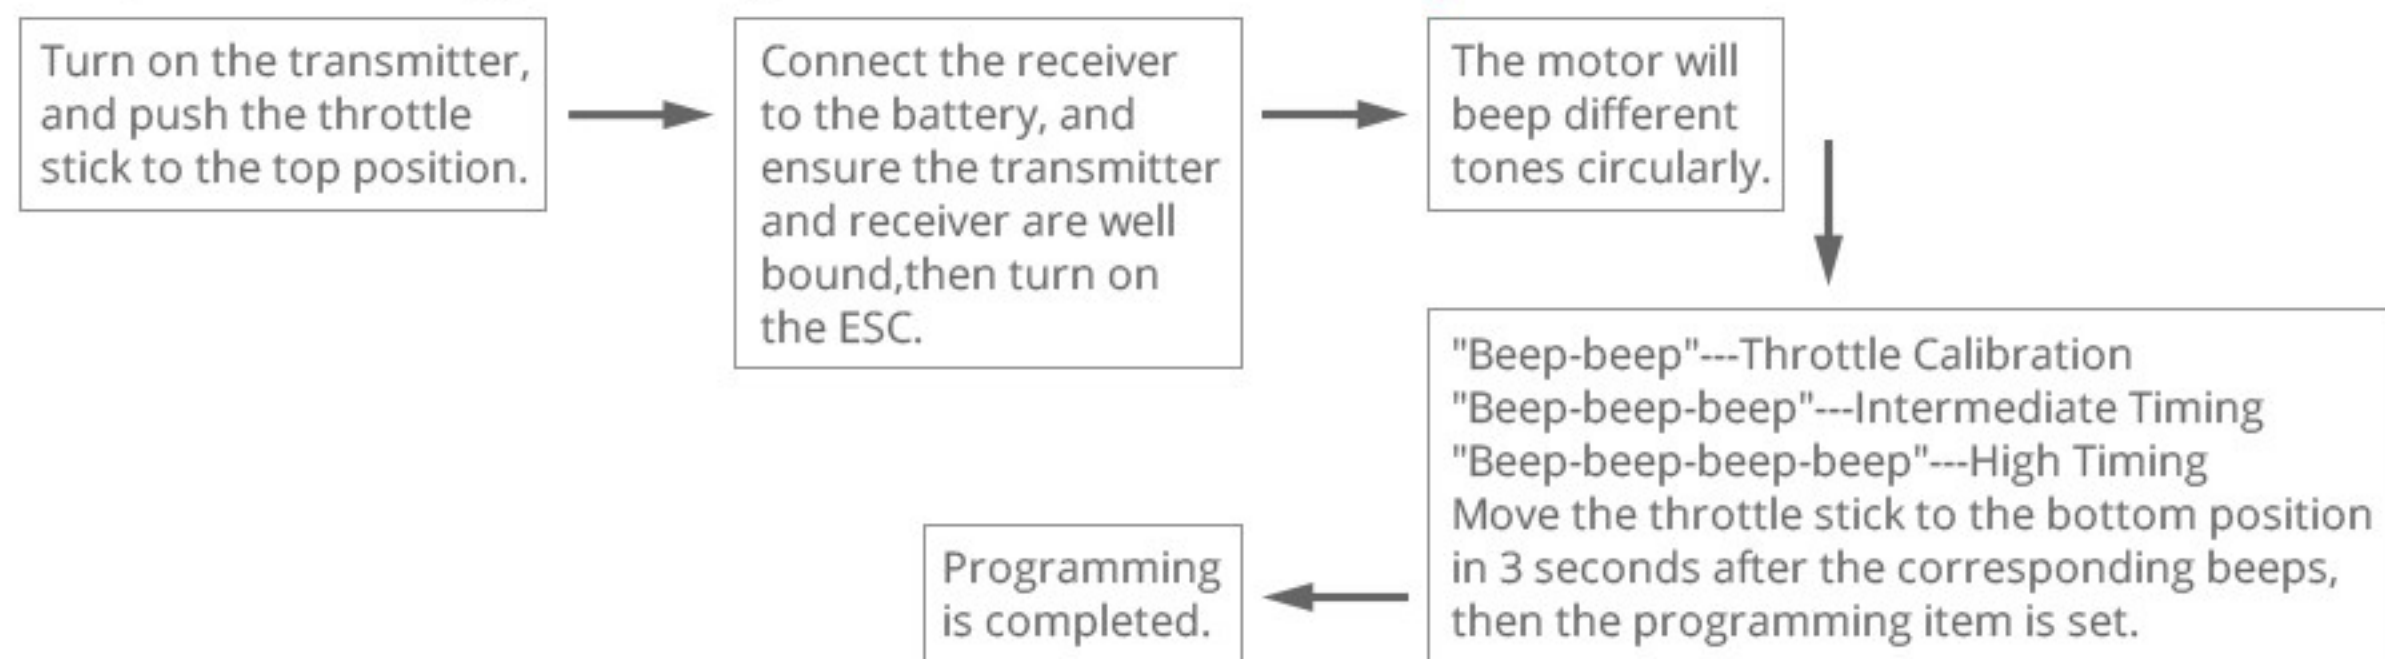

## NORMAL STARTUP PROCESS

